

DMSIS FIRMWARE

- HOW TO DOWNLOAD NEW FIRMWARE TO YOUR DMSIS STB -

1. Before Download - What you need.

- 1) RS-232C serial cable
- 2) DownLoader_v2.00.exe for Windows
- 3) Dmsis firmware (binary file)
- main.bin

2. Downloading Procedure.

- 1) Copy 'main.bin' file to any root directory of your PC.
- 2) Download the new firmware to your Dmsis STB.
 - a) Connect your PC(Com1 or Com2) with your Dmsis STB using RS-232C Serial Cable.
 - b) AC Power OFF (AC Power is at Rear Part).
 - c) Double click "Downloader" in the Windows mode.
 - d) Select Com1(or Com2) and Open "main.bin" file
 - e) Click "Start"
 - f) AC Power ON.
 - g) Wait until complete.(if complete, 'SUCC' Display at your STB's front LED)
- 3) AC Power OFF.

3. Error Message.

In case you see "Connection fail with STB", It means you did not Turn off the STB at first. Turn off the STB first, and Turn On after executing the downloader program.

Enjoy..

E-mail : dmsales@dmsis.co.kr

Website : www.dmsis.co.kr

Tel : +82 2 486 5912

Fax : +82 2 482 7135